


## Chicago Faucet - STYLE 'X'

- \* RENEWING KIT 1277D for Quatern and Slo-Compression Units  
Kit contains parts marked with an asterisk

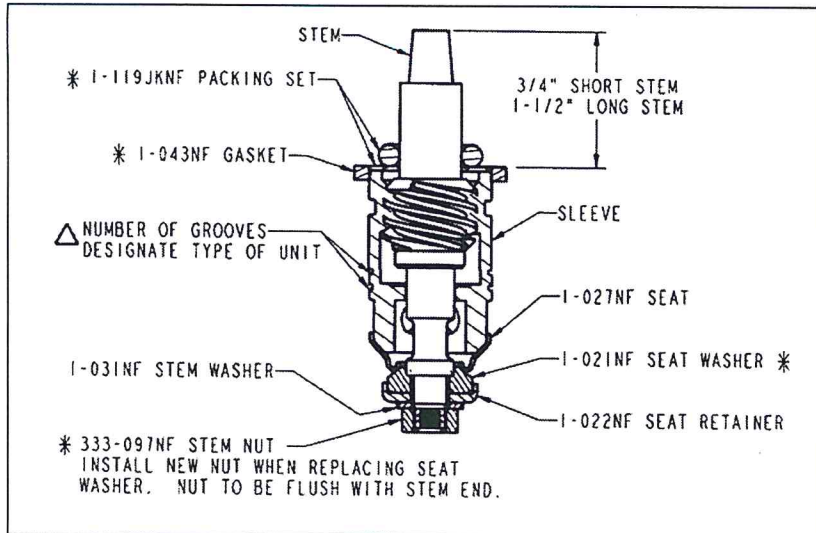

### **CAUTION: CLOSE UNIT BEFORE INSTALLING IN FAUCET BODY**

- ✓ Before installing a new cartridge flush lines completely.
- ✓ Always have a new cartridge with the seat washer compressed against the seat (closed position) when installing into valve body.
- ✓ **To install RIGHT HAND cartridge:** (1) Push cartridge into body until it seats, (2) Add cap nut and tighten **HAND TIGHT**, (3) Add handle and rotate it to the position desired (cartridge must remain closed), (4) Now, fully tighten cap nut to 25 ft. lbs. torque.
- ✓ **To install LEFT HAND cartridge:** (1) Push cartridge into body until it seats, (2) Add cap nut and tighten **HAND TIGHT**, (3) Add handle and rotate it so that the seat washer is away from the seat (open) and rotate the handle to the position desired, (4) Fully tighten cap nut to 25 ft. lbs. torque. (5) Return handle to closed position.
- ✓ Cap nut must be tightened to 25 ft. lbs. minimum so that cartridge will not spin when the handle is turned in open position.
- ✓ Clean up faucet finish with SOAP AND WATER ONLY.


### **GROOVE INDEX**

- 1 GROOVE - RIGHT HAND, Quatern Cartridge
- 2 GROOVES - LEFT HAND, Quatern Cartridge
- 3 GROOVES - RIGHT HAND, Slo-Compression Cartridge
- 4 GROOVES - LEFT HAND, Slo-Compression Cartridge

TAG 10 - 12/12/01

## Chicago Faucet - STYLE 'XT'

- \* RENEWING KIT 1277D for Quatern and Slo-Compression Units  
Kit contains parts marked with an asterisk

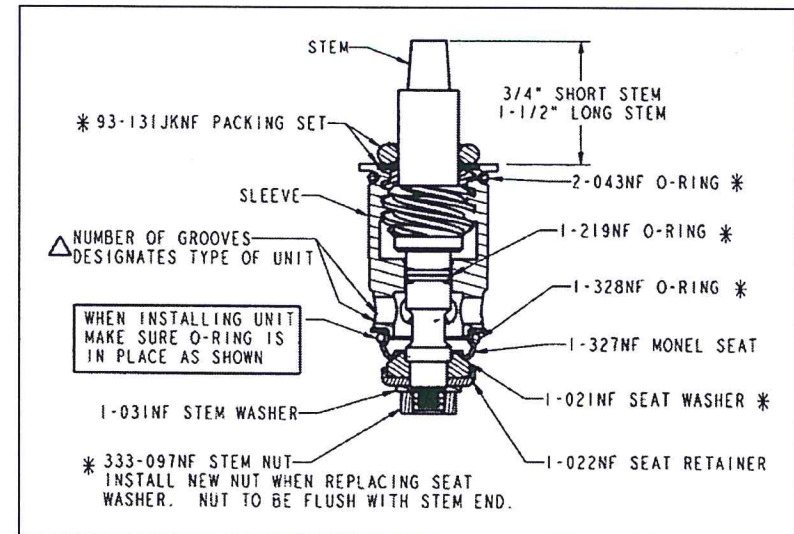

### **CAUTION: CLOSE UNIT BEFORE INSTALLING IN FAUCET BODY**

- ✓ Before installing a new cartridge flush lines completely.
- ✓ Always have a new cartridge with the seat washer compressed against the seat (closed position) when installing into valve body.
- ✓ **To install RIGHT HAND cartridge:** (1) Push cartridge into body until it seats, (2) Add cap nut and tighten **HAND TIGHT**, (3) Add handle and rotate it to the position desired (cartridge must remain closed), (4) Now, fully tighten cap nut to 25 ft. lbs. torque.
- ✓ **To install LEFT HAND cartridge:** (1) Push cartridge into body until it seats, (2) Add cap nut and tighten **HAND TIGHT**, (3) Add handle and rotate it so that the seat washer is away from the seat (open) and rotate the handle to the position desired, (4) Fully tighten cap nut to 25 ft. lbs. torque. (5) Return handle to closed position.
- ✓ Cap nut must be tightened to 25 ft. lbs. minimum so that cartridge will not spin when the handle is turned in open position.
- ✓ Clean up faucet finish with SOAP AND WATER ONLY.

### **GROOVE INDEX**

- 1 GROOVE - RIGHT HAND, Quatern Cartridge
- 2 GROOVES - LEFT HAND, Quatern Cartridge
- 3 GROOVES - RIGHT HAND, Slo-Compression cartridge
- 4 GROOVES - LEFT HAND, Slo-Compression Cartridge

TAG 10 - 12/12/01